



Sophisticated Soldering Safety



**Eye protection is always
in fashion.**






Assume the metal is hot!




Really, really hot!

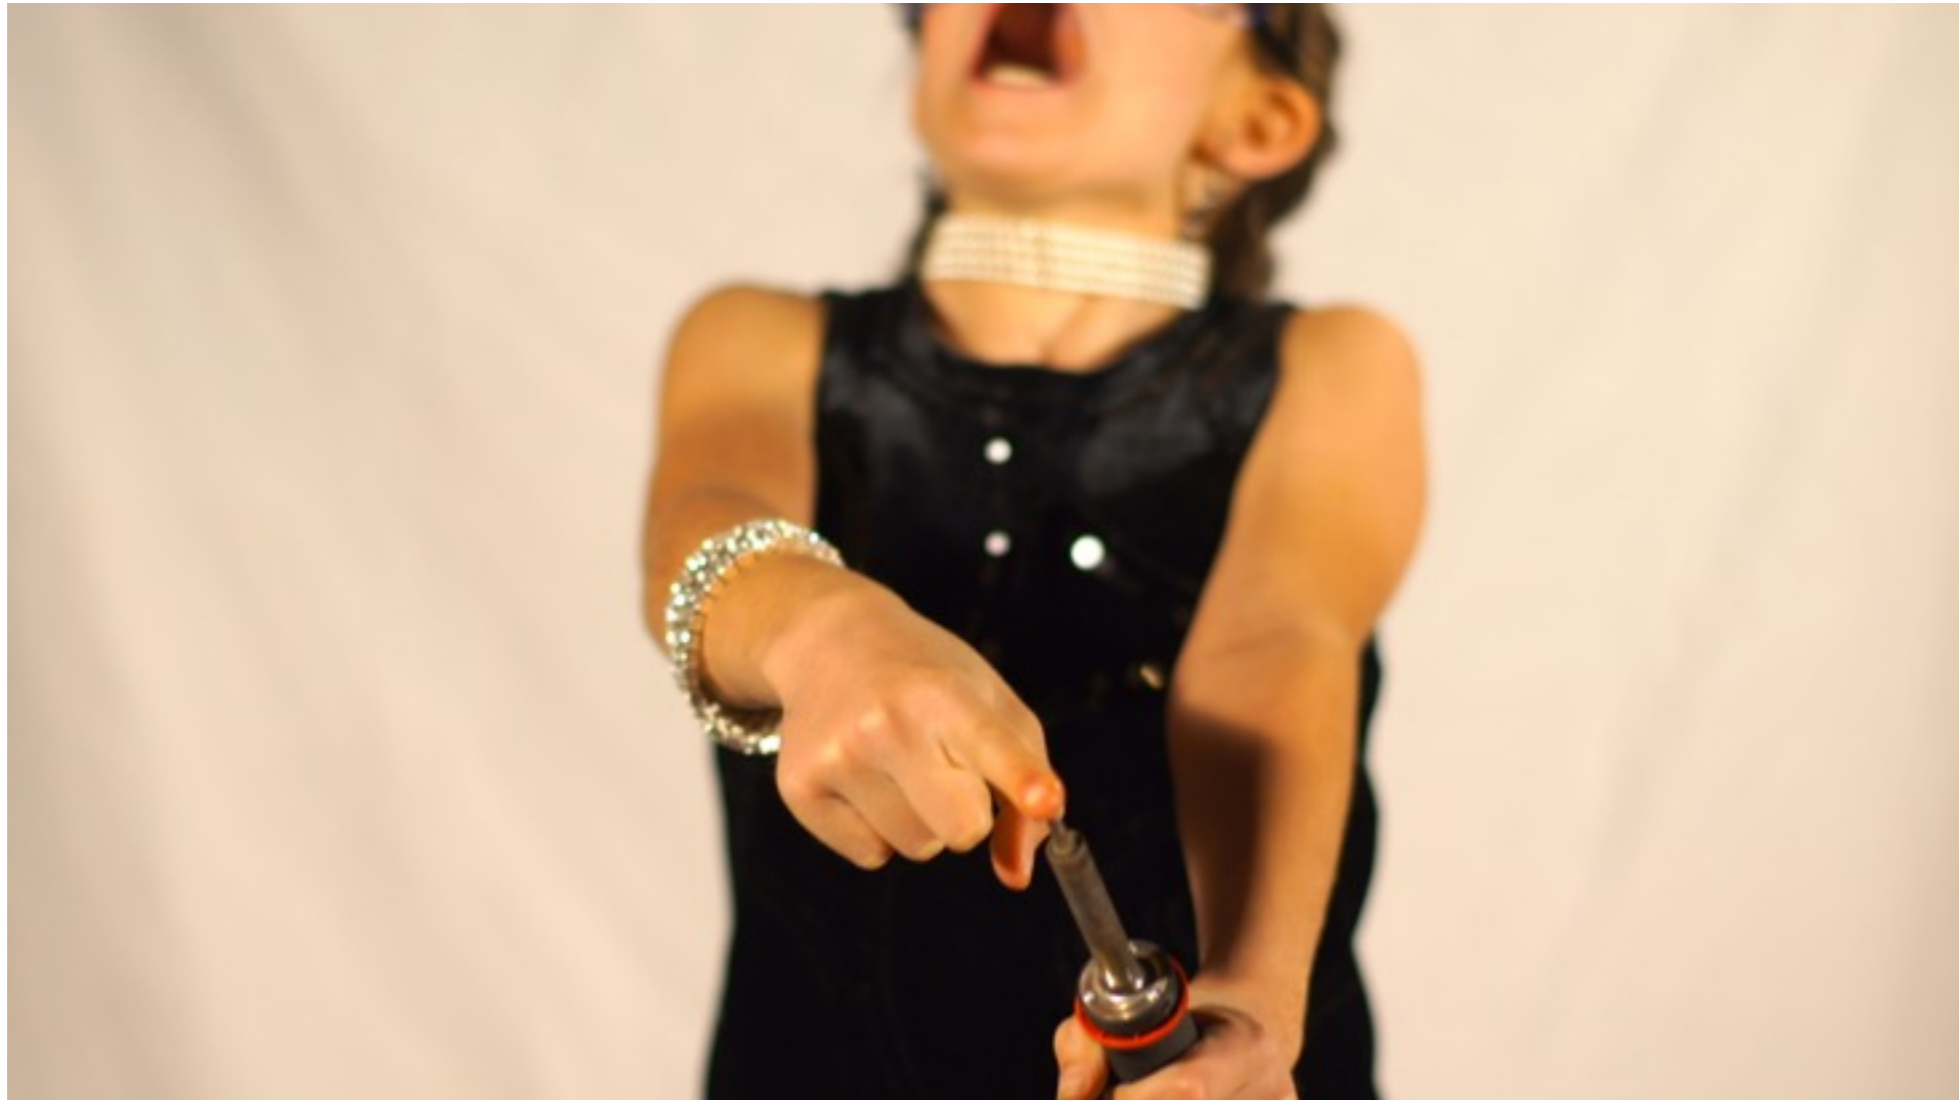

I mean it!

BAD!!

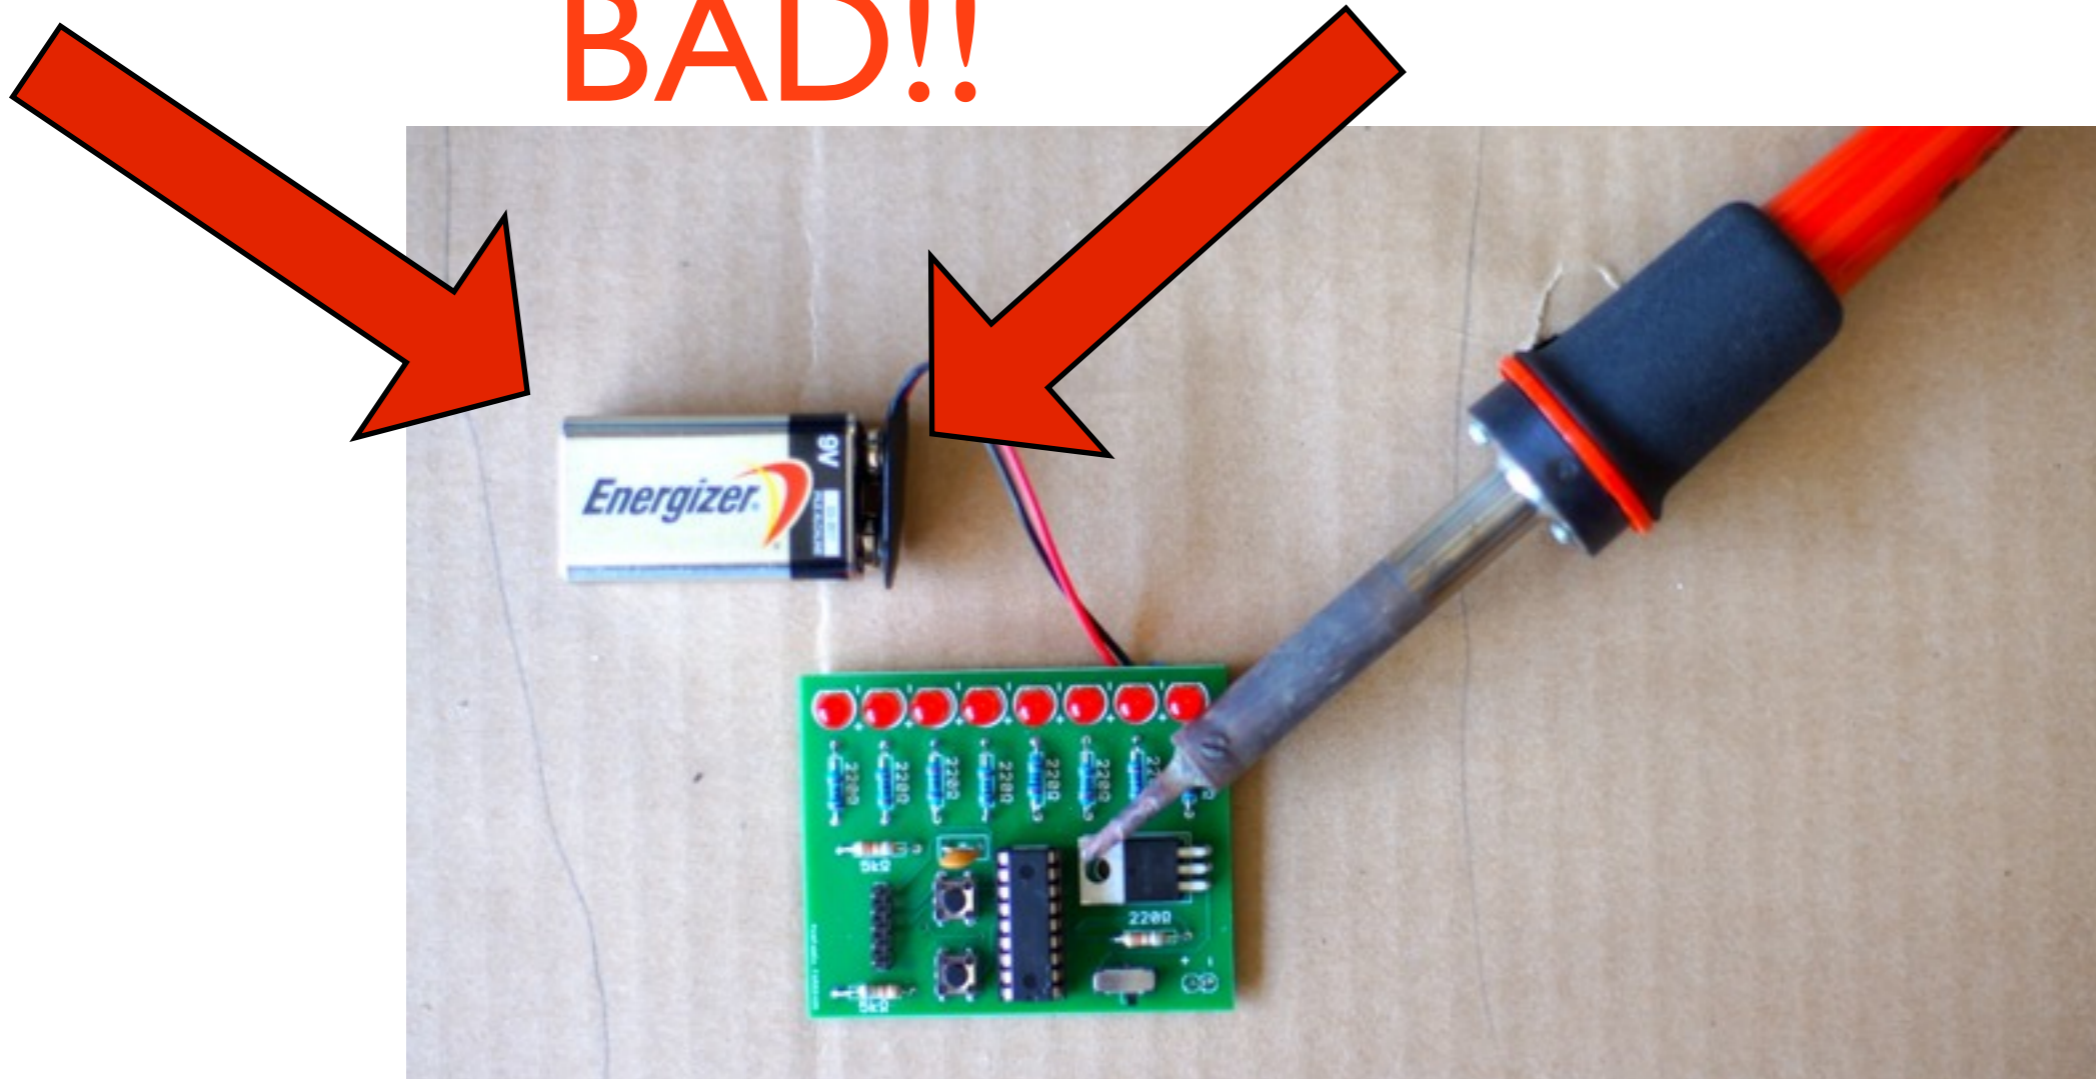

Do NOT solder a live circuit.

**Ensure good
ventilation.**

**Work outside or use
fans.**



Pull back long hair.



Have a clean workspace.

Paper and soldering
irons don't mix.



**Wait at least 30 seconds
before touching a soldered
joint.**



**Unplug when you walk
away.**



Use iron for good, not evil.



**Finally, wash your hands
when you're done.**



Let's get started...safely.